

Programming Your Code Dodger Keyless Entry

Resetting the wireless keypad

1. Open cover half way
2. Press and hold "PROG" and "8" while fully opening cover
3. INDICATOR will blink once and go out
4. Close cover fully
Wireless Keypad memory is now set the same as when it left the factory
Proceed with directions below



Basic Programming

1. Open cover fully Indicator will blink once on go out
2. Press 3-5-7
3. Press PROG Indicator will blink once per second
4. Enter PIN 1 (up to 8 digits)
5. Press PROG Indicator will blink twice per second
6. Close cover. Your keypad is now ready to be programmed to the garage door opener.
7. Locate the Learn code button on your CodeDodger garage door opener powerhead.
8. Depending on model, the learn code button will be located under the light cover or on the rear panel.
9. Press the learn code button Learn code LED will flash
10. Open cover on keypad fully
11. Enter PIN number
12. Press the SEND button 4 times, or until the door begins to operate.
13. You will now be able to use your wireless keypad normally.

Controlling a single door with your keypad

1. Open keypad fully
2. Press PIN number
3. Press SEND once
4. Door should operate normally

NOTE: As a "panic" feature this keypad will operate door for up to 30 seconds from any button.

Programming multiple doors with your keypad

1. Program your keypad according to the steps outlined in the Basic programming section listed above.
2. Open cover fully
3. Enter PIN number
4. Press PROG Indicator will blink once per second
5. Press PROG Indicator will blink twice per second
6. Press PROG indicator will blink three times per second
7. Enter the total number of doors (2 or 3)
8. Press PROG
9. Close cover
10. Your keypad is now ready to be program to the garage door openers.
11. Locate the learn code button on your garage door openers
12. Press the learn code button once Learn code indicator will flash
13. Open cover on keypad fully
14. Enter PIN

15. Press SEND
16. Enter door number 1-2-or-3
17. Press send button 4 times, or until door operates
18. Repeat these steps for door 2 and 3

Controlling multiple doors

1. Open cover fully
2. Enter PIN number
3. Press SEND
4. Enter door number (1-2-or 3)
5. Chosen door should operate

Adding PIN 2

1. Open cover fully
2. Enter 1-5-9
3. Press PROG Indicator will blink once per second
4. Enter PIN 2 (up to 8 digits)
5. Press PROG Indicator will go out
6. Close cover
7. Your keypad is now ready to be programmed to the garage door opener. See steps in Basic programming.

Adding temporary PIN

1. Open cover fully
2. Enter PIN 1
3. Press PROG Indicator will blink once per second
4. Press PROG Indicator will blink twice per second
5. Enter temporary PIN
6. Press PROG Indicator will blink three times per second
7. Close cover
8. Your keypad is now ready to be programmed to the garage door opener. See steps in Basic programming.

Canceling the temporary PIN

1. The temporary PIN will remain active until PIN 1 is entered.

Changing a PIN

1. Open cover fully
2. Enter PIN to be changed
3. Press PROG. Indicator will blink once per second
4. Enter new PIN
5. Press PROG
6. Indicator will blink twice if PIN 1 has changed or go out if PIN 2 was changed. Close cover. Your keypad is now ready to be programmed to the garage door opener.
7. Locate the Learn code button on your Intellicode/Codedodger garage door opener. Depending on model, the learn code button will be located under the light cover or on the rear panel.