

The Genuine. The Original.



WITH CODEDODGER® 2

This Wireless Keypad is compatible with all CODEDODGER® 1 and CODEDODGER® 2 radio equipped GENIE® products.

OPERATING INSTRUCTIONS (KEEP FOR FUTURE REFERENCE)

ATTENTION

If your garage door opener has a Serial Number sticker which looks like this, in which the first two numbers are 10 or higher, your opener is equipped with CODEDODGER® 2.




Follow the instructions on this page. Otherwise, follow the instructions on back.

FEATURES :

- Ability to Control up to three Overhead Door® CODEDODGER® 1 or 2 Openers
Simple to Program and Install
PIN Codes can be up to 8 Characters
Low Battery Power Indicator
Stays Programmed During Battery Change
Temporary PIN for Special Purpose Access

TOOLS NEEDED:

- Drill with 1/16" Drill Bit
Phillips Screwdriver
Pencil
Mounting Screws INCLUDED

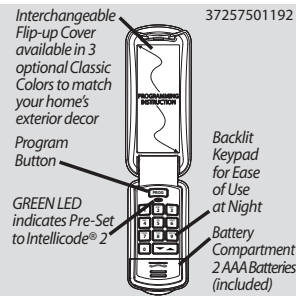

37257501192

WARNING

A Moving Door can cause serious injury or death.

- 1 Keep people clear of opening while Door is moving.
2 Do Not allow children to play with Wireless Keypad.
3 Wall Control should be mounted within sight of door, at least 5 feet above floor and clear of moving parts.
4 During programming, the Door Opener could begin to run, so stay away from the moving Door and its parts. To keep the Door from moving, close the Door and disconnect it from the Opener by pulling the Emergency Release Cord.

If Safety Reverse does not work properly:

- 1 Close Door and disconnect the opener using Emergency Release Cord.
2 Do not use Door Opener, Remote, or Wireless Keypad.
3 Refer to Door and Door Opener Owner's Manuals before attempting any repairs.

CODEDODGER® 2 MODE OF TRANSMISSION

This page is for CodeDodger® 2 Only:

If you have an CodeDodger® 1 opener or openers, go to the reverse side of this instruction.

SECTION 1 BASIC PROGRAMMING FOR ONE DOOR CODEDODGER® OPENERS

FOR CONVENIENCE

Program Keypad BEFORE mounting.

STEP 1: CREATING YOUR WIRELESS KEYPAD PIN (PERSONAL IDENTIFICATION NUMBER)

- Press in order 3 5 7.
Press PROGRAM.
Enter your PIN (3 to 8 characters).
Press PROGRAM.
Close keypad cover and wait 30 seconds.

STEP 2: PROGRAMMING SINGLE DOOR OPENER

Press and hold SET until both LEDs turn BLUE.

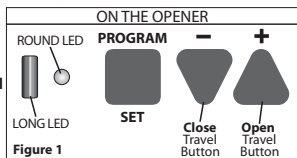


Figure 1

- Release button. Only round LED will be BLUE.
Press SET, release again. Long LED should blink PURPLE.
On the Wireless Keypad—enter your PIN.
Press SET. LEDs will stay on solid.
Press SET again. LEDs will turn off.
Press SET again. Door opener should run.
Press any key to stop opener. (It will automatically stop at the fully open or fully closed position.)

Wait until Keypad Backlight turns off (approximately 30 seconds).

STEP 3: OPERATING ONE DOOR OPENER

A To open or close the Garage Door.

- Enter your PIN.
Press SET.

NOTE

- If the Door does not move, check the LED on Keypad. If the LED is blinking rapidly, the PIN was entered incorrectly. After the LED stops blinking, re-enter your PIN and try again.
Any Keypad Button will control the Door for 30 seconds after the Door starts moving.
Rapid blinking of the red LED indicates an error. After a few seconds the LED will turn off. Start over.

Proceed to Section 3 - Mounting Instructions.

For answers to questions, call 1-800-275-6187, or visit www.overheaddoor.com

Overhead Door Corp., 2501 S State Hwy., Suite 200, Lewisville, TX 75067. Additional products can be ordered through local Overhead Door® Professional Dealers. To locate a dealer near you, call 1-800-929-DOOR.

SECTION 2 PROGRAMMING FOR MULTIPLE DOOR CODEDODGER® OPENERS

FOR CONVENIENCE

Program Keypad BEFORE mounting.

STEP 1: CREATING YOUR WIRELESS KEYPAD PIN (PERSONAL IDENTIFICATION NUMBER)

- Press in order 3 5 7.
Press PROGRAM.
Enter your PIN (3 to 8 characters).
Press PROGRAM.
Close keypad cover and wait 30 seconds.

STEP 2: PROGRAMMING MULTIPLE DOOR OPENERS

- All Door Openers will use the same PIN.
On your keypad:
Enter your PIN and press PROGRAM.
Press PROGRAM again.
Press the number of Doors (total) you wish to control (2 or 3).
Press PROGRAM.

On your opener's power head:

- Select first opener and press and hold SET until both LEDs turn BLUE.
Release button. Only round LED will be BLUE.
Press SET and release again. LEDs should blink PURPLE.

Decide which Door will be Door #1, #2 and #3.

- On your Wireless Keypad:
Enter PIN and press SET.
Press the number that you have picked for this door (1, 2 or 3).
Press SET 3 times — opener will run.
Repeat procedure below dotted line for remaining openers.

Wait until Keypad Backlight turns off (approximately 30 seconds).

STEP 3: OPERATING MULTIPLE DOOR OPENERS

Following programming—

- On your Wireless Keypad:
Enter your PIN.
Press SET.
Press the number of the door you wish to operate (1, 2 or 3).
Press any key to operate the door.

NOTE

- If the Door does not move, check the LED on Keypad. If the LED is blinking rapidly, the PIN was entered incorrectly. After the LED stops blinking, re-enter your PIN and try again.
Any Keypad Button will control the Door for 30 seconds after the Door starts moving.
Rapid blinking of the red LED indicates an error. After a few seconds the LED will turn off. Start over.

Proceed to Section 3 - Mounting Instructions.

FCC and IC CERTIFIED

This device complies with FCC Part 15 and RSS 210 of Industry Canada. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which may be determined by turning the equipment OFF and ON, the user is encouraged to try to correct the interference by one or more of the following measures:
Re-orient or relocate the receiver antenna.
Increase the separation between the transmitter and receiver.
Connect the transmitter into an outlet on a circuit different from that to which the receiver is connected.
Consult your local dealer.


SECTION 3 MOUNTING INSTRUCTIONS

The Keypad must be mounted in sight of the Door(s), at least 5 feet above the ground and clear of any moving Door parts.

A Mount Keypad. (Mounting screws located inside Battery Compartment.)

- Remove Battery Cover and batteries. (See Figure 3).
Drill a 1/16" pilot hole for the top mounting screw.
Install a screw into the drilled hole, leaving a 1/8" gap between the screw head and the wall. (See Figure 2).
Hook the Keypad over the screw.
Mark and drill pilot hole and fasten bottom screw.
Install Batteries and Cover.

Figure 2

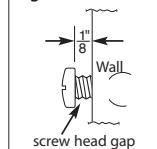

SECTION 4 ADDITIONAL OPERATIONS

CHANGING YOUR PIN

- Enter your current PIN and press PROGRAM.
Enter your NEW PIN and press PROGRAM.

USING A TEMPORARY PIN

A temporary PIN allows temporary access to your home by repair persons, meter readers, etc. if you so desire.

- Enter your current PIN and press PROGRAM 3 times.
Enter your TEMPORARY PIN and press PROGRAM.

NOTE

- DO NOT reprogram the Door Opener (s).
Temporary PIN remains active only until the next time your normal PIN is entered.

FORGOT YOUR PIN (RESETTING WIRELESS KEYPAD)

If you have forgotten your PIN or you fear it may have fallen into unauthorized hands, you must erase the old programming.

- Press and hold PROGRAM.
While holding PROGRAM press and hold SET for 5 seconds.
Release both buttons. You must now start from the beginning and reprogram your Wireless Keypad.

CHANGING BATTERY

- If the Keypad backlight does not come on, this indicates the need to replace the batteries.
Press in on the front of the battery cover and slide it down off of the Keypad.
Remove used batteries and replace with "AAA." Make sure the batteries are inserted properly using the polarity markings.
No programming is lost during replacement of batteries.

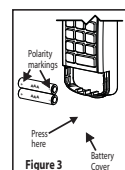


Figure 3

Covers available in:

- Tan - P/N 37227T
Almond - P/N 37227U
Gray - P/N 37227S
White - P/N 37227R

## ▲ WARNING

### A Moving Door can cause serious injury or death.

- 1 Keep people clear of opening while Door is moving.
- 2 **Do Not** allow children to play with Wireless Keypad.
- 3 Wall Control should be mounted within sight of door, at least 5 feet above floor and clear of moving parts.
- 4 During programming, the Door Opener could begin to run, so stay away from the moving Door and its parts. To keep the Door from moving, close the Door and disconnect it from the Opener by pulling the Emergency Release Cord.


 
### If Safety Reverse does not work properly:

- 1 Close Door and disconnect the opener using Emergency Release Cord.
- 2 **Do not** use Door Opener, Remote, or Wireless Keypad.
- 3 Refer to Door and Door Opener Owner's Manuals before attempting any repairs.

## CODEDODGER® 1 MODE of CODE TRANSMISSION

### To Operate CodeDodger® 1 Openers:

This Wireless Keypad comes from the factory as an CodeDodger® 2 unit. In order to initially program an opener or openers which are CodeDodger®1, you must switch the Keypad to CodeDodger®1 mode.

- After entering your PIN, Press .
- Press and hold  for two seconds and the GREEN LED above the number keys will turn RED.
- Close the Keypad cover.
- Follow the instructions on this page for programming your CodeDodger® 1 opener(s).






Once all your doors have been programmed, there is no need to switch back and forth between CodeDodger® modes. The Keypad will automatically remember the mode of each opener.

## SECTION 1 BASIC PROGRAMMING FOR ONE DOOR CODEDODGER® OPENER

### FOR CONVENIENCE

Program Keypad **BEFORE** mounting.

#### STEP 1: CREATING YOUR WIRELESS KEYPAD PIN (PERSONAL IDENTIFICATION NUMBER)

- Press in order   .
- Press .
- Enter your PIN (3 to 8 characters).
- Press .
- Close keypad cover and wait 30 seconds.




#### STEP 2: TEACHING PIN TO SINGLE OPENER

Find the Learn Code Button and Learn Code Indicator LED on your door opener.

- If your Door Opener has a black antenna wire *and* the serial number does not start with 10 or higher, the Learn Code Button and Indicator LED are located near the antenna. (The light lens may need to be opened. If you use an external receiver, it may need to be opened to access the Learn Code Button and Indicator LED.




- If your Door Opener *does not* have an Antenna, you have an External Receiver. The External Receiver cover must be removed to access the Learn Code Button and Indicator LED.

- Press the Learn Code Button.
  - Learn Code Indicator LED (on Opener) will blink.
- Enter your PIN and press  on Keypad.
  - Learn Code Indicator LED stays on.
- Press  again.
  - Learn Code Indicator LED turns off.
- Press  again.
  - Opener will run.

Wait until Keypad Backlight turns off (approximately 30 seconds).

#### STEP 3: OPERATING ONE DOOR OPENER

To open or close the Garage Door.

- Enter your PIN.
- Press .

### NOTE

- If the Door does not move, check the red LED on Keypad. If the LED is blinking rapidly, the PIN was entered incorrectly. After the LED stops blinking, re-enter your PIN and try again.
- Any Keypad Button will control the Door for 30 seconds after the Door starts moving.
- Rapid blinking of the red LED indicates an error. After a few seconds the LED will turn off. Start over.

Proceed to Section 3 - Mounting Instructions.

For answers to questions, call 1-800-275-6187, or visit [www.overheaddoor.com](http://www.overheaddoor.com)

Overhead Door Corp., 2501 S State Hwy, Suite 200, Lewisville, TX 75067. Additional products can be ordered through local Overhead Door® Professional Dealers. To locate a dealer near you, call 1-800-929-DOOR.






©2011 Overhead Door Corporation

## SECTION 2 PROGRAMMING FOR 2 OR 3 DOOR CODEDODGER® OPENER

### FOR CONVENIENCE

Program Keypad **BEFORE** mounting.






#### STEP 1: CREATING YOUR WIRELESS KEYPAD PIN (PERSONAL IDENTIFICATION NUMBER)

- Press in order   .
- Press .
- Enter your PIN (3 to 8 characters).
- Press .
- Close keypad cover and wait 30 seconds.







#### STEP 2: PROGRAMMING MULTIPLE DOOR OPENERS

All Door Openers will use the same PIN.

On your keypad:

- Enter your PIN and press .
- Press  again.
- Press the number of Doors (total) you wish to control (  or  ).
- Press .

Decide which Door will be Door #1, #2 and #3.





- Enter your PIN and press  on Keypad.
- Press the number you have picked for this Door Opener (  or  or  ).
- Press and hold the  for 2 seconds.
- Press the Learn Code Button. (See Step 2 in Section 1.)
- Press  3 times.
  - Opener will run.

Repeat procedure below dotted line for each opener. (Each Door Opener must be programmed to receive the signal from the Wireless Keypad).

Wait until Keypad Backlight turns off (approximately 30 seconds).

#### STEP 3: OPERATING MULTIPLE DOOR OPENERS

To open or close a Door after programming is complete.

- Enter your PIN.
- Press .
- Press Door Opener number (  or  or  ).

### NOTE

- If the Door does not move, check the red LED on Keypad. If the LED is blinking rapidly, the PIN was entered incorrectly. After the LED stops blinking, re-enter your PIN and try again.
- Any Keypad Button will control the Door for 30 seconds after the Door starts moving.
- Rapid blinking of the red LED indicates an error. After a few seconds the LED will turn off. Start over.


Proceed to Section 3 - Mounting Instructions.

## SECTION 3 MOUNTING INSTRUCTIONS

The Keypad must be mounted in sight of the Door(s), at least 5 feet above the ground and clear of any moving Door parts.



- A Mount Keypad. (Mounting screws located inside Battery Compartment).
  - Remove Battery Cover. (See Figure 3).
  - Drill a 1/16" pilot hole for the top mounting screw.
  - Install a screw into the drilled hole, leaving a 1/8" gap between the screw head and the wall. (See Figure 2).
  - Hook the Keypad over the screw.
  - Mark and drill pilot hole and fasten bottom screw.
  - Reinstall Battery Cover.

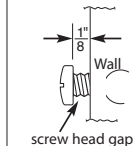Figure 2





## SECTION 4 ADDITIONAL OPERATIONS

### CHANGING YOUR PIN

- Enter your current PIN and press .
- Enter your NEW PIN and press .

### USING A TEMPORARY PIN

A temporary PIN allows temporary access to your home by repair persons, meter readers, etc. if you so desire.

- Enter your current PIN and press  3 times.
- Enter your TEMPORARY PIN and press .




### NOTE

DO NOT reprogram the Door Opener(s).

- Temporary PIN remains active only until the next time your normal PIN is entered.


### FORGOT YOUR PIN (RESETTING WIRELESS KEYPAD)

If you have forgotten your PIN or you fear it may have fallen into unauthorized hands, you must erase the old programming.

- Press and hold .
- While holding  press and hold  for 5 seconds.
- Release both buttons. You must now start from the beginning and reprogram your Wireless Keypad.

### CHANGING BATTERY

- If the Keypad backlight does not come on, this indicates the need to replace the batteries.
- Press in on the front of the battery cover and slide it down off of the Keypad.
- Remove used batteries and replace with "AAA." Make sure the batteries are inserted properly using the polarity markings.
- **No** programming is lost during replacement of batteries.

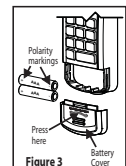

Covers available in:

- Tan - P/N 37227T
- Almond - P/N 37227U
- Gray - P/N 37227S
- White - P/N 37227R

Figure 3